G25 PRO SERIES

Maximum Flow Rate: 76 l/min (20.0 USgpm)

Maximum Pressure: 69 bar (1000 psi) for Metallic Pump Heads

24 bar (350 psi) for Non-metallic Pump Heads

WANNER™ HYDRA-CELL® PRO

SEAL-LESS PUMP TECHNOLOGIES





A higher standard of pump performance and energy efficiency.

- Integrates Wanner Hydra-Cell® Pro seal-less pump technologies for the highest levels of volumetric and energy efficiencies, up to 90% across the full rpm range.
- Reliably handles a wide range of viscosities and shear sensitivities, corrosive liquids, abrasives, slurries and suspended solids.
- No mechanical dynamic seals, packing, or cups to leak, wear or replace - reduces maintenance, costs and downtime.
- Can run dry indefinitely without damage to the pump.

- Seal-less design API 674 pumps that also exceed API 675 standards for accuracy, linearity and repeatability.
- Pumped media is 100% contained prevents degradation, contamination and environmental risks.
- Patented ADPC (Advanced Diaphragm Position Control) and hydraulic oil management system protect diaphragms under closed or restricted inlet conditions.
- Reduced ownership costs acquisition, operation, service, maintenance, and energy use.



G25 Pro Series | Performance

Capacities

	Max.	Max. Flow	Capacities	Max	. Inlet	l		Max. Disch	arge Pressu	re	
	Input	@69 bar	(1000 psi)	Pres	sure	Metalli	c Heads	Polypropy	/lene Heads	PVDF	Heads
Model	rpm	l/min	USgpm	bar	psi	bar	psi	bar	psi	bar	psi
G25-X	1050	75.7	20.0	17	250	69	1000	17	250	24	350
G25-E	1150	75.9	20.0	17	250	69	1000	17	250	24	350


Performance and specification ratings apply to G25 configurations unless specifically noted otherwise.

Metering & Dosing

API 675 Performance Characteristics of Steady State Accuracy \pm 1%, Linearity \pm 3% and Repeatability \pm 3% can be achieved at speeds up to 960 rpm and pressures up to 69 bar (Metallic Head) and 24 bar (non-metallic pump heads)

Available to Meet API 674

Please contact Wanner International for further information.

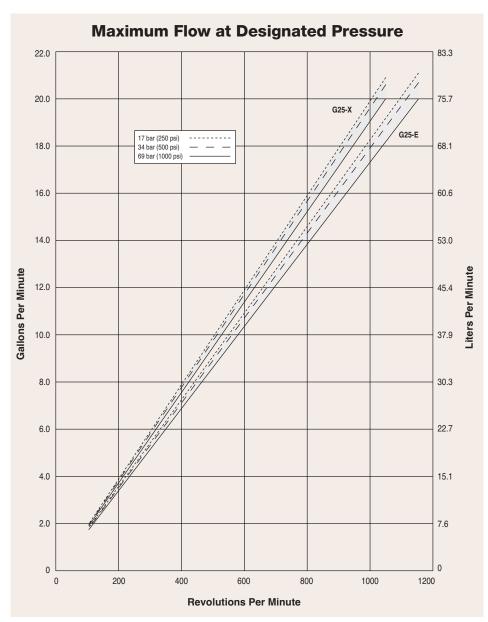

 True positive displacement pumping action achieves overall efficiency of >90%, targeting improvements at lower speeds and higher pressures.

Due to the Wanner Engineering Continuous Improvement Program, specifications and other data are subject to change.



G25 Pro Series | Specifications

Flow Capacities @ 69 bar (1000 psi) 6-pole Motor @ 50 Hz						
Model	rpm	I/min	USgpm			
G25-X	960	69.2	18.2			
G25-E	960	63.3	16.7			
Flow Capacities @ 69 bar (1000 psi) 8-pole Motor @ 50 Hz						
Model	rpm	I/min	USgpm			
G25-X	730	52.6	13.9			
G25-E	730	48.2	12.7			

Delivery @ 69 bar (1000 ps

Model	litres/rev	gal/rev
G25-X	0.0721	0.0190
G25-E	0.0660	0.0174

Maximum Discharge Pressure

Metallic Heads: 69 bar (1000 psi)

Non-metallic Heads: 17 bar (250 psi) Polypropylene

24 bar (350 psi) PVDF

Maximum Inlet Pressure

17 bar (250 psi)

Maximum Operating Temperature

Metallic Heads: 121°C (250°F) - Consult factory for correct

component selection for temperatures from

71°C (160°F) to 121°C (250°F).

Non-metallic Heads: 60°C (140°F).

mon motamo moda	
Maximum Solids S	ize 800 microns
Inlet Port	1-1/2 inch BSPT
	1-1/2 inch NPT
	150lb ANSI RF Flange
Discharge Port	1 inch BSPT
	1 inch NPT
	600lb ANSI RF Flange

Calculating Required Power

$$\frac{50 \times \text{rpm}}{63,000} + \frac{\text{gpm x psi}}{1,460} = \text{electric motor hp}$$


$$\frac{50 \times \text{rpm}}{84,428} + \frac{\text{l/min x bar}}{511} = \text{electric motor kW}$$


Attention!

When using a variable frequency drive (VFD) controller, calculate the hp or kW at minimum and maximum pump speed to ensure the correct hp or kW motor is selected. Note that motor manufacturers typically de-rate the service factor to 1.0 when operating with a VFD.

Calculating Pulley Size

$$\frac{\text{motor pulley OD}}{\text{pump rpm}} = \frac{\text{pump pulley OD}}{\text{motor rpm}}$$

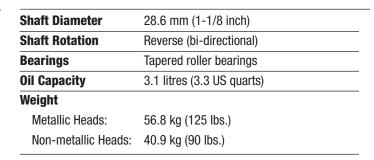

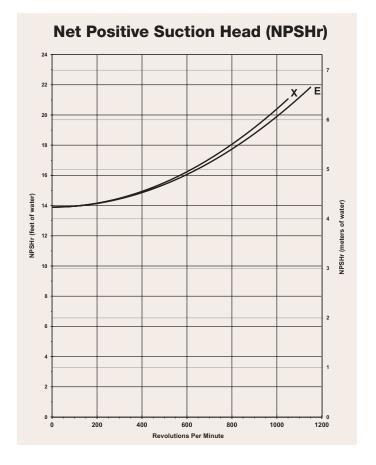


Suction Lift

Each Hydra-Cell pump has different lift capability depending on model size, cam angle, speed, and fluid characteristics. To ensure that your specific lift characteristics are met, refer to the inlet calculations regarding friction, and acceleration head losses in your Hydra-Cell Product Manual. Compare those calculations to the NPSHr curves above.


Due to the Wanner Engineering Continuous Improvement Program, specifications and other data are subject to change,




Baseplate Assembly with Motor Adaptor for IEC 132 Motor Frame

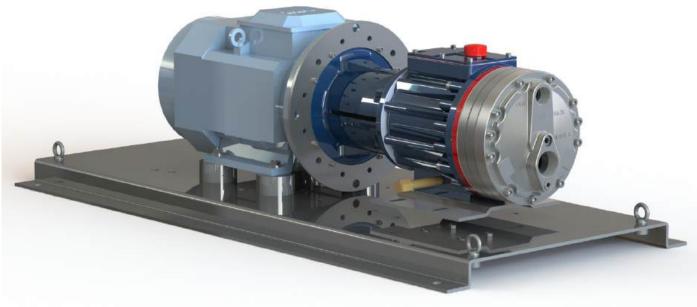


Dimensions in mm

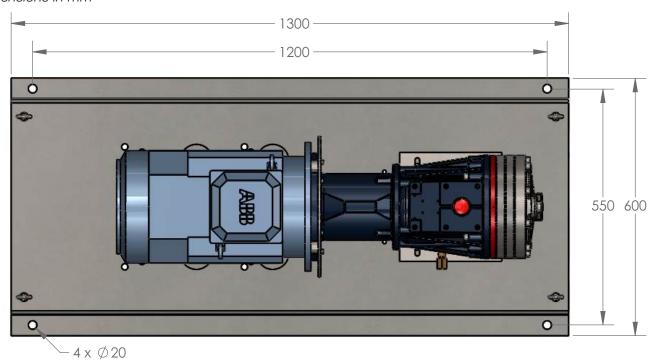


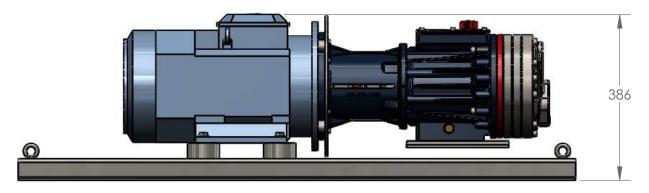


Baseplate Assembly Long-coupled for IEC 132 Motor Frame

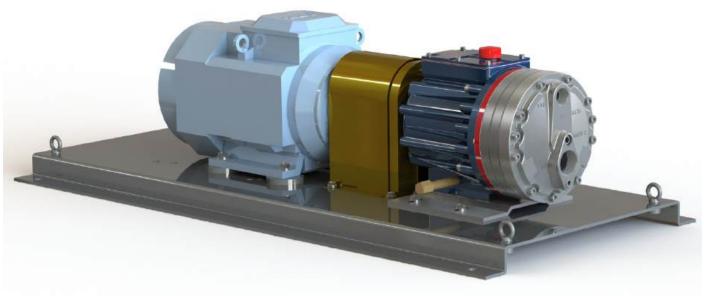


Dimensions in mm

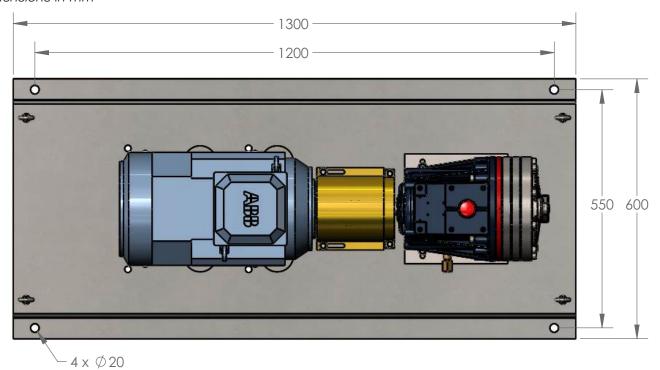


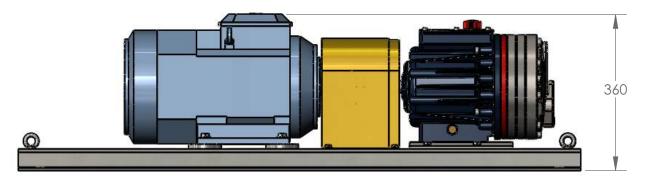


Baseplate Assembly with Motor Adaptor for IEC 160 Motor Frame




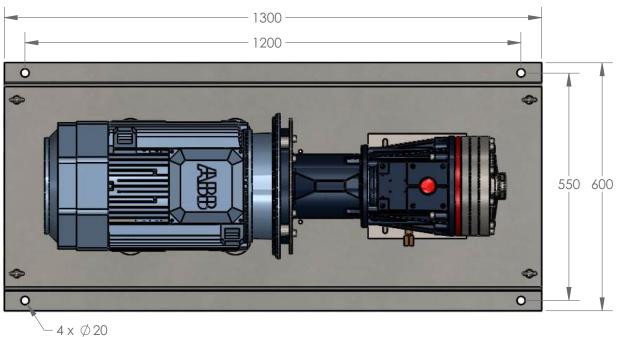


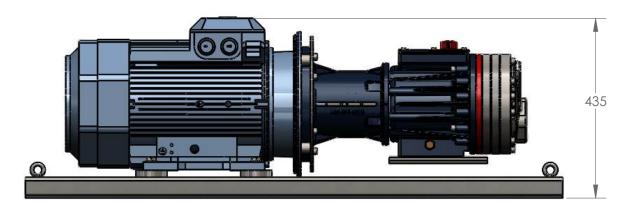


Baseplate Assembly Long-coupled for IEC 160 Motor Frame

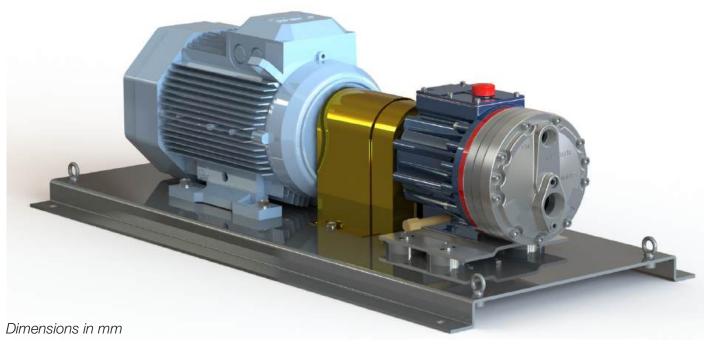


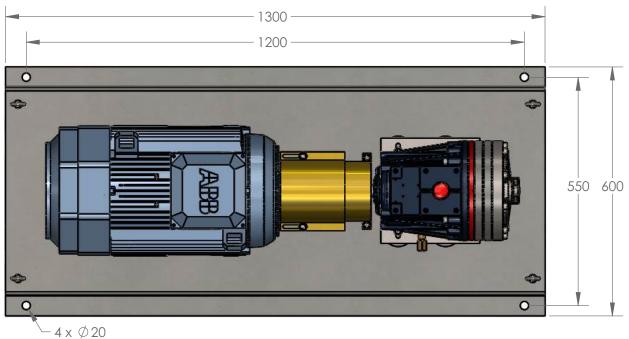


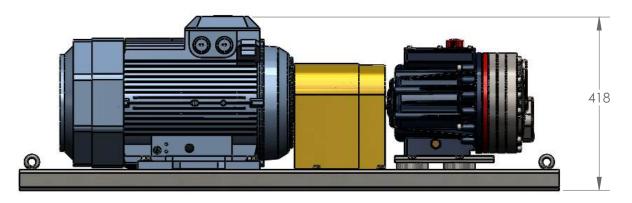


Baseplate Assembly with Motor Adaptor for IEC 180 Motor Frame

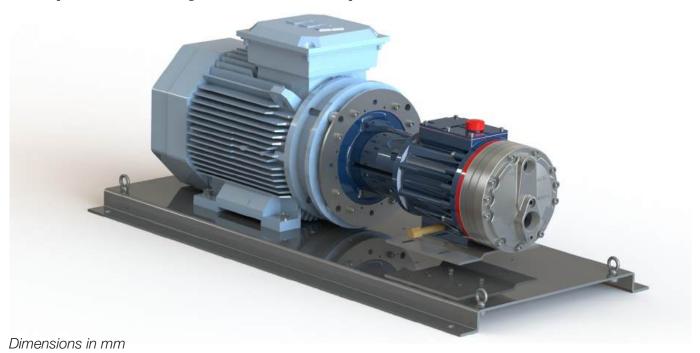

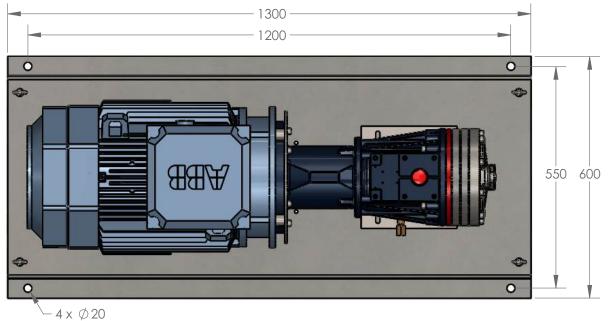


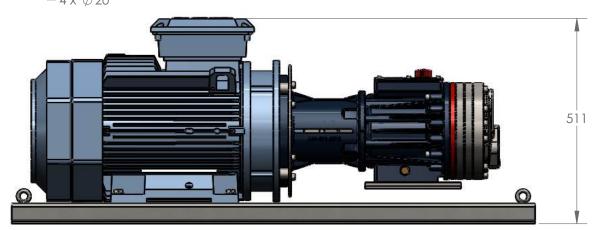


Baseplate Assembly Long-coupled for IEC 180 Motor Frame

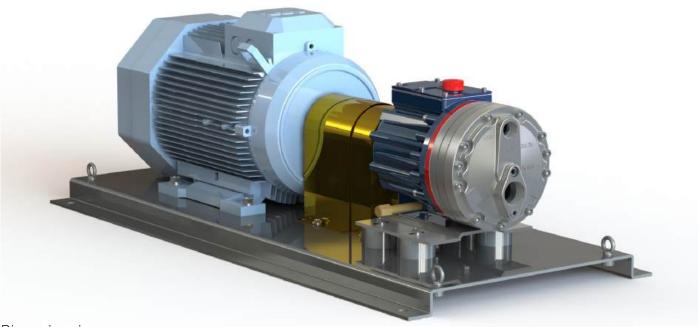


Dimensions in mm

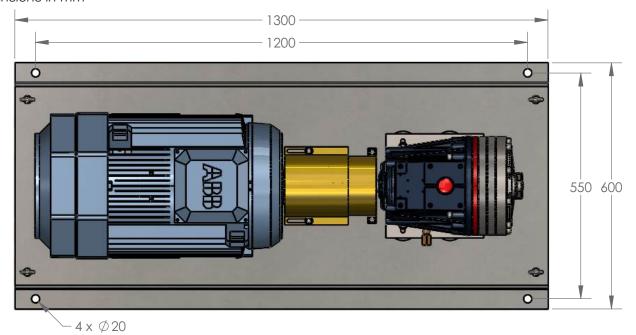

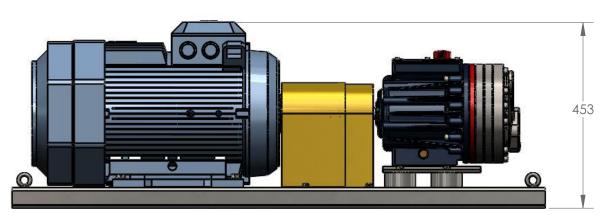


G25 Pro Series | Representative Drawings

G25 Models with Metallic Pump Head mm (Inches)

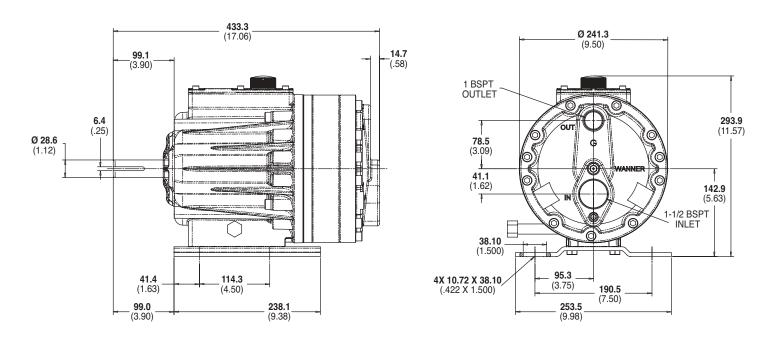

G25 Models with Non-metallic Pump Head mm (Inches)

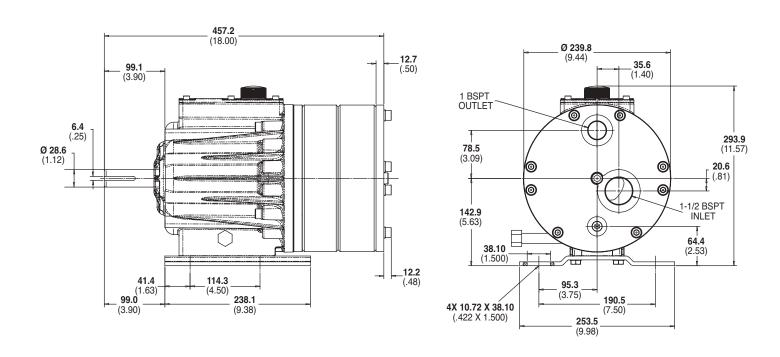



Note: Dimensions are for reference only. Contact factory for certified drawings.



G25 Pro Series | Representative Drawings

G25 Models with ANSI RF Flanges mm (Inches)

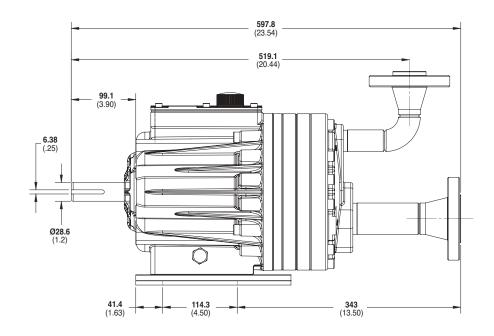

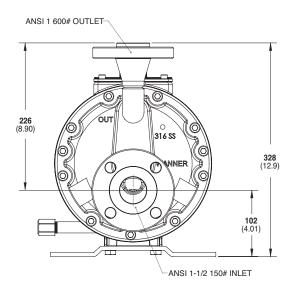

Note: Dimensions are for reference only. Contact factory for certified drawings.


G25 Pro Series | Adapters / Valves

Pump/Motor Adapter mm (Inches)

Part Number: A04-041-1201

Must be ordered separately for G25 models for use with IEC 132 frame motors, B35 flange.


NEMA adaptor available - consult factory.

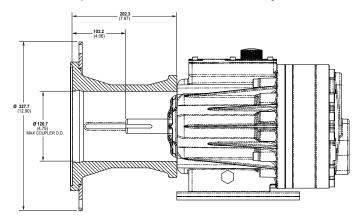

Part Number: A04-041-1203

Must be ordered separately for G25 models for use with IEC 160 frame motors, B14 flange.


NEMA adaptor available - consult factory.

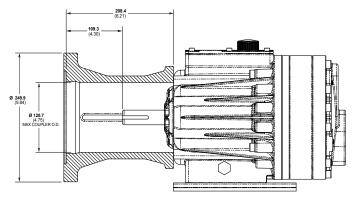

Part Number: A04-041-1205

Must be ordered separately for G25 models for use with IEC 160 - 180 frame motors, B35 flange.

NEMA adaptor available - consult factory.

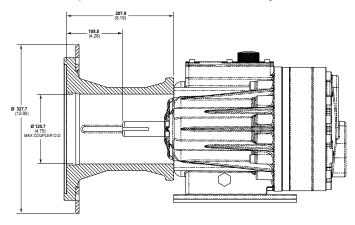

Valve Selection

A seal-less **C63 Pressure Regulating Valve** is recommended for Hydra-Cell G25 pumping systems, especially for high-pressure requirements or when handling dirty fluids.



A C23 Pressure Regulating Valve provides a capable, lower-cost alternative to C63 valves for Hydra-Cell G25 pumping systems.






G25 Pro Series | Options

Contact Wanner International for:

- Motors, bases, couplings and other pump accessories
- Hydra-Oil selection and specification information
- Design considerations, installation guidelines, and other technical assistance in pump selection
- Process liquid end built with NACE and 3.1 traceable material certification



G25 with Cast Iron pump head.

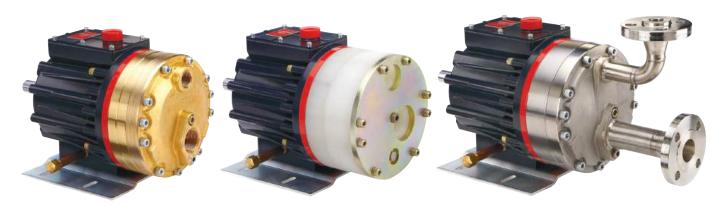

G25 with Brass pump head.

G25 with Polypropylene pump head.

G25 with Stainless Steel pump head and ANSI RF flanges.



G25 Pro Series | How to Order

Ordering Information

A complete G25 Series Model Number contains 12 digits including 9 customer-specified design and materials options, for example: G25XKCGNNECA.

1	2	3	4	5	6	7	8	9	10	11	12
G	2	5						Ш			

Digit	Order Code	Description
1-3		Pump Configuration
	G25	Shaft-driven (BSPT)
4		Hydraulic End Cam
	X	Max 69.2 I/min (18.2 USgpm) @ 960 rpm
	E	Max 63.2 I/min (16.7 USgpm) @ 960 rpm
5		Pump Head Version
	Р	Hydra-Cell Pro
	M	Hydra-Cell Pro - machined housing to accept C-face adapter/gearbox
		See lower right for ATEX Certification Kit Options.
6		Pump Head Material
	В	Brass
	C	Ductile Iron (Nickel-plated)
	G	Duplex Alloy 2205 Stainless Steel (with Hastelloy C followers & follower screws)
	M	PVDF (with Hastelloy C followers & follower screws)
	N	Polypropylene (with Hastelloy C followers & follower screws)
	R	316L Stainless Steel ANSI flange class 150 x 600
	-	316L Stainless Steel standard manifold with custom ANSI or DIN flange options, contact Wanner international with flange specification for part number.
	S	316L Stainless Steel
	T	Hastelloy CW12MW
7	<u> </u>	Diaphragm & O-ring Material
-	Α	Aflas diaphragm / PTFE o-ring
	E	EPDM (requires EPDM-compatible oil - Digit 12 oil code C)
	G	FKM
	J	PTFE (available with E and S cams only; 960 rpm max.)
	K	FFKM diaphragm / PTFE o-ring
	Р	Neoprene
	T	Buna-N
8		Valve Seat Material
	C	Ceramic
	D	Tungsten Carbide (900 rpm max.)
	Н	17-4 Stainless Steel
	N	Nitronic 50
	т	Hastellay C

	Order	
Digit	Code	Description
9		Valve Material
	C	Ceramic
	D	Tungsten Carbide (900 rpm max.)
	F	17-4 Stainless Steel
	N	Nitronic 50
	T	Hastelloy C
10		Valve Springs
	E	Elgiloy
	T	Hastelloy C
11		Valve Spring Retainers
	C	Celcon
	Н	17-7 Stainless Steel
	M	PVDF
	P	Polypropylene
	T	Hastelloy C
	Υ	Nylon (Zytel)
12		Hydra-Oil
	Α	10W30 standard-duty oil
	В	40-wt for continuous-duty oil (use with 316L SST or Hastelloy CW12MW pump head - standard)
	C	40-wt EPDM-compatible oil
	E	Food-contact oil
	G	5W30 cold-temp severe-duty synthetic oil
	Н	15W50 high-temp severe-duty synthetic oil

G25 Pump Housing is standard as Cast Aluminum.

Upgrade to Ductile Iron available.



ATEX Certification Kit Options

As a separate line on your order, please add the required ATEX Certification Kit Option.

- ATEX 2014/34/EU Certified, Category 2, Zone 1
- ATEX 2014/34/EU Certified, Category 3, Zone 2
- All options include Certificate, Oil Level Monitor or Sight Glass, Earth Stud & Secondary ATEX Label.
- Extra oil is required to fill the oil bowl during installation of ATEX pumps. This oil is not included and must be ordered separately.
- ATEX is not available with non-metallic pump heads.




Hastelloy C



SEAL-LESS PUMP TECHNOLOGIES

Partners in over 70 countries

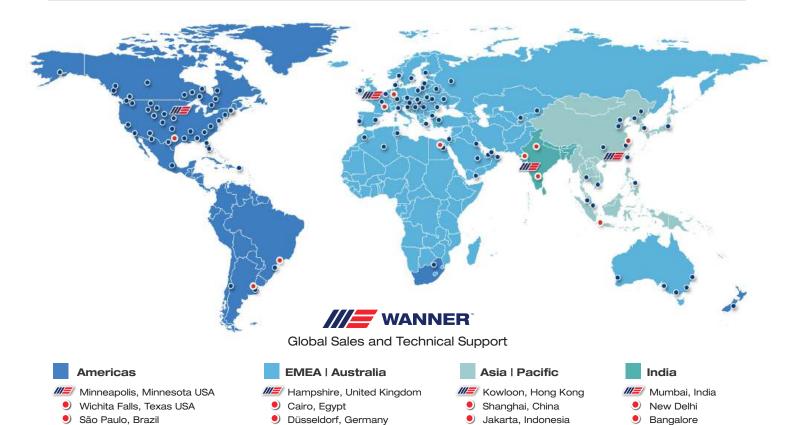

Wanner worldwide

Buenos Aires, Argentina

GLOBAL SALES & TECHNICAL SUPPORT

WANNER ENGINEERING, INC.

WORLD HEADQUARTERS & MANUFACTURING

Minneapolis, Minnesota USA t: 612-332-5681 e: sales@wannereng.com Hydra-Cell.com

REGIONAL OFFICE

Wichita Falls, Texas USA t: 940-322-7111 e: sales@wannereng.com

LATIN AMERICAN OFFICE

São Paulo, Brazil t: +55 (11) 99582-1969 e: mmagoni@wannereng.com Hydra-Cell-Pumps.com.br

WANNER INTERNATIONAL, LTD.UNITED KINGDOM

Lyon, France

Church Crookham, Hampshire UK t: +44 (0) 1252 816847 e: support@wannerint.com Hydra-Cell.co.uk

WANNER PUMPS, LTD.

Kowloon, HONG KONG t: +852 3428 6534 e: sales@wannerpumps.com WannerPumps.com

Shanghai, CHINA t: +86-21-6876 3700 e: sales@wannerpumps.com WannerPumps.com

WANNER INDIA PVT. LTD.

Gujarat

Mumbai, INDIA t: +91 (22) 22044766 e: support@wannerindia.com WannerIndia.com

